 


TRM Application Chart

TRACTOR	TYRE SECTION	OUTSIDE FLAT AIR BAG	OUTSIDE HEAT PAD		INSIDE HEAT PAD		SECTION AIR BAG	TOP PLATE REQUIRED
			RADIAL TYRE	X-PLY TYRE	RADIAL TYRE	X-PLY TYRE		
9.5-32 11.2-38 12.4-38	TRUCK 8.25 9.00 10.00 11.00 12.00 315/80	TRM4815	TRZ2213H	TRZ2210H	TRZ2210H	TRZ2213H	TR911/13W FRB	*TP1 OR *TP2
	SUPER SINGLE 365/80 TO 445/65	TRM4815	TRZ2213H	TRZ2210H	TRZ2210H	TRZ2213H	TR1315/15W	*TP1
14.4 - 24 TO 16.9 - 28	OTR 13.00 TO 17.5 - 25	TRM4815	MZ1616H	TRZ2213H	TRZ2213H	MZ1616H	TR1315/15W	*TP2

*Guide to Top Plates [TP]

	TRUCK (INC. SUPER SINGLES)	TRACTOR	OTR
Top Plate 1 [TP1]			
Top Plate 2 [TP2]			

RECOMMENDED OPERATING PRESSURE FOR AIR BAGS

OUTSIDE FLAT AIR BAG: 32PSI

CYLINDER AIR BAG: 32PSI

IMPORTANT- DO NOT LEAVE VULCANISING EQUIPMENT UNATTENDED DURING OPERATION

Please note that this application chart is a general guide for common tyre sizes. Additional components are available. Each fiiller kit will also cover all the sizes below the size listed for that line. For further information or guidance please contact repair@monaflex.com